




i n v e n t

## HP 4000/ 4050 Fuser Installation Instructions


Please allow printer to sit for 30 minutes before performing these maintenance procedures.

### Fuser Installation:

1. Remove the paper tray and toner cartridge from the printer.
2. Turn the printer around so that the rear is facing you.
3. Remove the dust cover for tray 2 or the optional duplexer.
4. Open the rear door (output bin) and remove it by slightly bending it in the middle so that its left and right hinges are freed from the printer's frame. Remove left and right screw covers. **PIC 1**
5. Release the fuser by loosening the captive screws on the left and right. **PIC 2**
6. Install the new fuser in reverse fashion, install the left side first and push the fuser firmly into the printer.

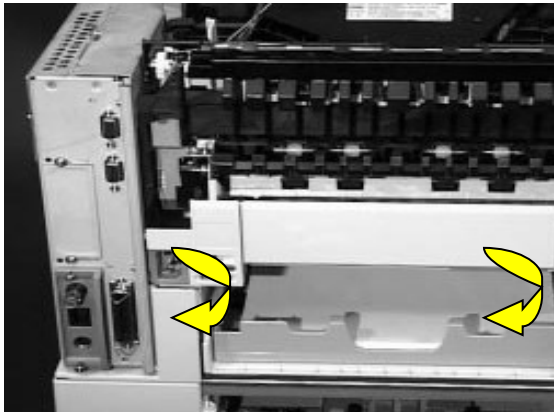

**PIC 1**

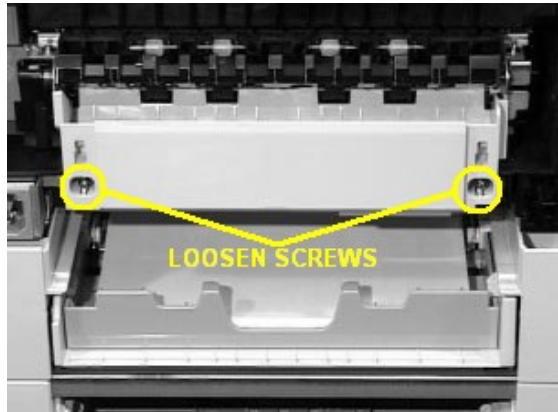

**PIC 2**

### HP Maintenance Message Reset Method:

1. While holding down the START button, turn the machine on.
2. Hold down the left side of the ITEM and VALUE +/- keys, turn the printer no and wait until REST MAINTENANCE COUNT is displayed and then release the keys.

### ERROR CODES:

- 50.1 Low fuser temp
- 50.2 Fuser not warming up
- 50.3 High fuser temp
- 50.4 Faulty fuser
- 50.8 Low fuser temp(subthermistor)
- 50.9 High fuser temp(subthermistor)